WILDTRAK

WPS
WILDTRAK POWER SYSTEMS

S6000 MULTI-FUNCTION CAR JUMP STARTER

USER MANUAL



CA7303


What's in the Box

- Wildtrak S6000
- Smart battery clamps with starter cable with boost button feature
- 1x Multi-charging cable
- 1x 12V Car charger
- 1x AC Wall charger
- 1x User-friendly manual
- 1x 12V Female cig socket
- 1x Zipper case

SPECIFICATIONS	
Capacity	99.16Wh/26800mAh
EC5 Output	12V/3000A (STARTING) 12V/6000A (MAX)
USB1 Output	5V/3A, 9V/2A, 12V/1.5A (QC3.0)
USB2 Output	5V/3A, 9V/2A, 12V/1.5A (QC3.0)
Type-C In/Output	5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/3A Max (PD60W)
DC Output	12V/10A
Wireless Charging Output	15W MAX
Charging Time	PD60W: 2 Hours Type-C: 4.5 Hours
LED Light Power	White: 5W
Working Temp	-20°C~+60°C / -4°F ~ +140°F
Dimensions	220 x 102 x 49mm

Product Overview

❶ Power button
❷ USB1: 5V/3A, 9V/2A, 12V/1.5A
❸ USB2: 5V/3A, 9V/2A, 12V/1.5A
❹ DC Output
❺ Type-C In/Output: 5V/3A ; 9V/3A ; 12V/3A ; 15V/3A ; 20V/3A Max (PD60W)
❻ LED display
❼ EC5 jump start output
❽ LED light
❾ Light button
❿ Wireless charging

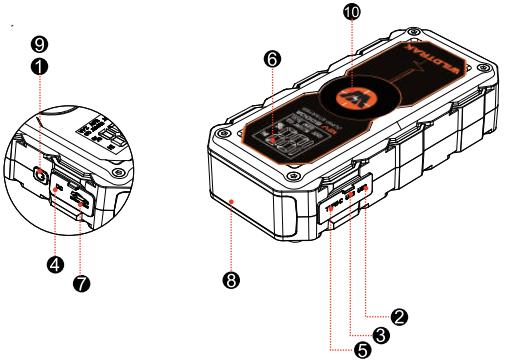

Accessories

- Smart jumper clamps with starter cable
- 12V Car charger
- AC wall charger
- Multi-charging cable
- 12V Female cig socket




How to Charge the Jump Starter Battery
Charging with an AC Adapter

1.Connect the battery input with Type-C cable.

2.Connect the Type-C cable to AC adapter.

3.Plug the AC adapter into a power source.

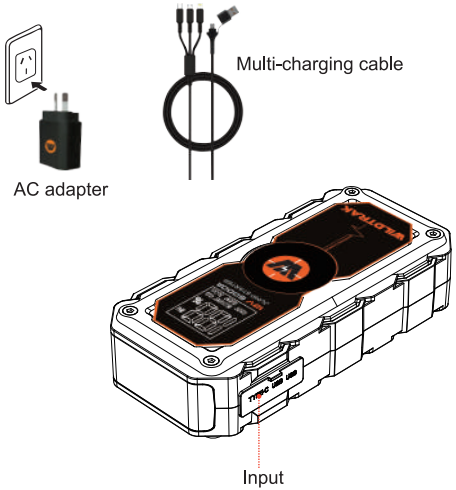

LED display

Press the power button, the LED display shows as follows:



Show available battery

Last digit will flash when charging





How to Jump Starter your Battery






This unit is designed for jump starting 12V car batteries only and rated for all gas and up to 10 litres diesel. Do not attempt to jump start vehicles with a higher battery rating, or different voltage. If the vehicle isn't started immediately, please wait for 1 minute to allow the device to cool down. Do not try to restart the vehicle after three consecutive attempts as this may damage the unit. Check your vehicle for other possible reasons why it can't be restarted.

Operating Instructions

First step:	Second step:	Third step:	Fourth step:
Press the power button to turn it on. Check the battery shown on the LED display, then plug jumper cable into battery pack outlet.	Connect the jumper to the car battery - red clamp to positive, black clamp to negative pole of car battery.	Turn on the car engine to start car.	Pull the plug of battery terminal from jump starter and remove clamps from auto battery.

Jumper Clamp Indicator Instruction

STATUS	TECHNICAL PARAMETER	DESCRIPTION	SOLUTION
Standby indication 	Green light flashes	Jump cables connect to jump starter, then green light flashes.	/
Automatic conduction status indicator (ready to jump start your car) 	Green light	Jump cables connect to the car battery after connecting the jump starter, then green light on	/
Force start function 	Support	If the above operations cannot start your car, please use the forced start function	Ensure the correct connection of clamps before using force start function, long press the force start button for 5 seconds until green light on, after 90 seconds press the force start button for 2s, green light flashes then press the force start button for 2s, return to standby.


PROTECTION	TECHNICAL PARAMETER	DESCRIPTION	SOLUTION
Reverse connection protection (car battery voltage)	⩾2V	Wrong connection between jump cable and car's positive and negative poles. The red light stays on Note: Due to the different conditions of each car, the original car electrical appliances may be damaged, so use with caution.	Keep the correct connection, the positive pole (red) and the positive pole are connected, the negative pole (black) and the negative pole are connected
High temperature protection	⩾90℃±10℃	The red light stays on and beep long alarm sounds; Cut off voltage output	Automatically recover when the temperature drops
Start timeout protection	Support	Automatically enters the standby state after more than 90 seconds and the green light flashes	You can use it again after disconnecting for a minute
Input low capacity protection	⩽ 13.0V	When it is detected that the power of the EC5 port is lower than 13.0V, there is no output at this time, the red light stays on and beep long alarm sounds	Please charge jump starter
Short circuit protection	Support	When the red and black clips are short-circuited in the standby state, no spark, no damage, the buzzer sounds	Please use the positive and negative poles of jump cables to connect the positive and negative poles of the car's engine to try to start your car

How to Charge a Mobile Phone or other Digital Devices




With powerful capacity and three USB output ports (one is USB Quick Charge PD60W, it can full charge your smart phones and tablets up to 75% faster than a standard charger. You can charge three devices at the same time.

Operating Instructions

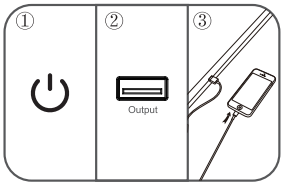

Press the power button-->connect the phone and power bank output port—>charging

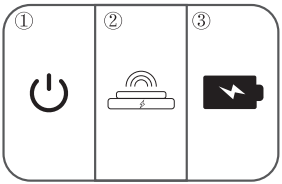



Press the power button—>put the phone on wireless charging area—>charging

LED Flashlight



Short press the Light Button to turn on the flashlight. The battery capacity indicator lights up. Short press the light button again to scroll through the lighting, Strobe, SOS. Short press again to turn off the flashlight. The flashlight offers more than 40 hours of continuous use when fully charged.

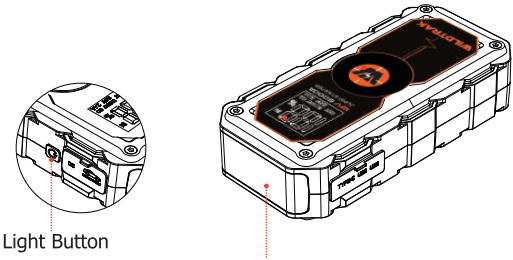

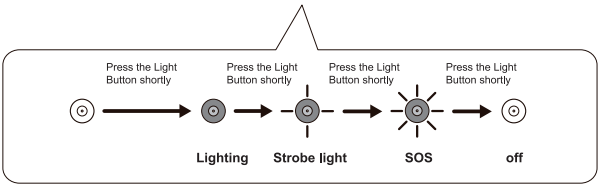

Safety Warning

1. Do not connect the red and black clamps, this will cause the unit to short circuit.
2. Do not disassemble the unit.
3. Stop using immediately if the item is leaking or has an odour.
4. Do not use in extreme temperatures, high humidity, or in/around water.
5. Wait 1 minute between attempting two starts.
6. Do not use if the battery power is under 10%, it is recommended not to use the unit under 50%
7. Charge for at least 3 hours and ensure the battery is full charged before first use, and every 3 months after.

Warranty Exemption

1. The 12 months manufacturer's warranty will be void if:
   The unit has been incorrectly used or operated outside of the safety warning guidelines.
2. The unit has been repaired, dissembled or modified by persons not authorized to do so by the manufacturer.
3. The unit has been charged using a non-compliant charger.

48 Griffin Crescent, Brendale, QLD 4500
(08) 9455 3200 | sales@wildtrak.com.au
www.wildtrak.com.au

12 MONTH LIMITED WARRANTY

WARRANTY PERIOD:

12 month warranty from date of purchase.

THIS LIMITED WARRANTY COVERS:

- Any defect in the manufacture or design of the items which results in their failure to perform as advertised.
- If item damage is found to have been caused by a design or manufacturing defect, we will replace or repair the item at our discretion.

Our products include guarantees that cannot be excluded under the Australian Consumer Law. Consumers are entitled to the following:

- Replacement or refund for item failure
- Compensation for reasonably foreseeable loss or damage
- Item replacement or repair if it fails to be of acceptable quality even if it does not amount to a major failure

These benefits provided to you as a consumer are in addition to other rights available under the law.

THIS LIMITED WARRANTY DOES NOT COVER:

- Damage from improper use or tampering
- Cost of removal and reinstallation of the product
- Wrong installation or modifications made while installing
- Travel and/or other expenses due to consumer's secluded location
- Transport charges and any damage during transportation. It is the consumer's responsiblity to deliver and pick up their product, this includes all costs that comes with the postage of the repair or replacement of their product. If consumer decides to freight their product, it is advised to insure it against loss or damage.
- Damages caused by insects, animals, mould, bad weather, accidents and fair wear and tear
- Any loss directly or indirectly resulting to product failing to operate

WILDTRAK

Email claim along with proof of purchase to sales@wildtrak.com.au